



RCC User's Manual

RTEMS Cross Compiler User's Manual

*RCC-UM
Version 1.2.17
November 2014*

RCC User's Manual

Copyright © 2014 Aeroflex Gaisler AB

Table of Contents

| | |
|--|----|
| 1. Introduction | 1 |
| 1.1. General | 1 |
| 1.2. Installation on host platform | 1 |
| 1.2.1. Host requirements | 1 |
| 1.2.2. Installing RCC on Windows platforms | 1 |
| 1.2.3. Installing on Linux platform | 3 |
| 1.3. Contents of /opt/rtems-4.10 | 3 |
| 1.4. RCC tools | 3 |
| 1.5. Documentation | 4 |
| 1.6. RCC source Git access | 5 |
| 1.7. Support | 5 |
| 2. Using RCC | 6 |
| 2.1. General development flow | 6 |
| 2.2. sparc-rtems-gcc options | 6 |
| 2.3. RTEMS applications | 6 |
| 2.4. Floating-point considerations | 7 |
| 2.5. LEON SPARC V8 instructions | 7 |
| 2.6. Memory organisation | 7 |
| 2.7. Board-support packages (BSPs) | 7 |
| 2.7.1. LEON3 BSP | 8 |
| 2.7.2. NGMP BSP | 8 |
| 2.8. Driver Manager | 8 |
| 2.8.1. Initialization | 8 |
| 2.8.2. Configuration | 9 |
| 2.8.3. Driver configuration | 9 |
| 2.8.4. drvmgr command | 11 |
| 2.9. Network configuration | 12 |
| 2.10. PCI | 12 |
| 2.11. Making boot-proms | 13 |
| 2.12. Simple examples | 13 |
| 2.13. Multiprocessing | 13 |
| 2.13.1. MP testsuite | 14 |
| 3. Execution and debugging | 16 |
| 3.1. TSIM | 16 |
| 3.2. GRMON | 16 |
| 3.3. GDB with GRMON and TSIM | 17 |
| 3.4. Using DDD graphical front-end to gdb | 18 |
| 4. Support | 19 |
| 5. Disclaimer | 20 |

1. Introduction

1.1. General

This document describes the RTEMS LEON/ERC32 GNU cross-compiler system (RCC). Discussions are provided for the following topics:

- installing RCC
- contents and directory structure of RCC
- compiling and linking LEON and ERC32 RTEMS applications
- usage of GRMON
- debugging application with GDB

RCC is a multi-platform development system based on the GNU family of freely available tools with additional tools developed by Cygnus, OAR and Aeroflex Gaisler. RCC consists of the following packages:

- GCC-4.4.6 C/C++ compiler
- GNU binary utilities 2.20.1 with support for LEON CASA/UMAC/SMAC instructions
- RTEMS-4.10.2 C/C++ real-time kernel with LEON2, LEON3, LEON4 and ERC32 support
- Newlib-1.18.0 standalone C-library
- GDB-6.8 SPARC cross-debugger

1.2. Installation on host platform

1.2.1. Host requirements

RCC is provided for two host platforms: linux/x86 and MS Windows. The following are the platform system requirements:

Linux: Linux-2.6.x, glibc-2.11.1 (or higher)
Windows: MSYS-1.0.10 (or higher)

In order to recompile the RTEMS kernel sources automake-1.11.1 and autoconf-2.68 is required. MSYS-DTK-1.0.1 is needed on Windows platforms to build autoconf and automake. The sources of automake and autoconf can be found on the GNU ftp server:

- <ftp://ftp.gnu.org/gnu/autoconf/>
- <ftp://ftp.gnu.org/gnu/automake/>

MSYS and MSYS-DTK can be found at <http://www.mingw.org>.

1.2.2. Installing RCC on Windows platforms

The toolchain installation zip file (sparc-rtems-4.10-gcc-4.4.x-1.2.x-mingw.zip) must be extracted to C:\opt creating the directory C:\opt\rtems-4.10-mingw. The toolchain executables can be invoked from the command prompt by adding the executable directory to the PATH environment variable. The directory C:\opt\rtems-4.10-mingw\bin can be added to the PATH variable by selecting "My Computer->Properties->Advanced->Environment Variables". Development often requires some basic utilities such as make, but is not required to compile, on Windows platforms the MSYS Base system can be installed to get a basic UNIX like development environment (including make). The RTEMS sources rely on the autoconf and automake utilities to create Makefiles. The MSYS Base system doesn't include the required version of autoconf and automake, instead they can be compiled from sources as described below.

1.2.2.1. Installing MSYS

The MSYS package can be freely downloaded from <http://www.mingw.org>, it comes as a self extracting installation application (MSYS-1.0.10.exe). The following text assumes the MSYS has been successfully installed to C:\msys. The directory where the toolchain is installed (C:\opt\rtems-4.10-mingw) must be found in /opt/rtems-4.10-mingw from the MSYS environment, this can be done by adding an mount entry similar to one of the examples below to the /etc/fstab file in the MSYS environment.

```
C:/opt/rtems-4.10-mingw /opt/rtems-4.10-mingw
```

or

```
C:/opt /opt
```

The path to the toolchain binaries (`C:\opt\rtms-4.10-mingw\bin`) must be added to the `MSYS PATH` environment variable. Below is an example of how to change the `PATH` variable in the `MSYS` shell.

```
export PATH=/opt/rtms-4.10-mingw/bin:$PATH
```

The toolchain installation can be tested by compiling the samples included in the toolchain,

```
$ cd /opt/rtms-4.10-mingw/src/samples
$ make
```

1.2.2.2. Installing RTEMS source

Installing the RTEMS kernel sources are optional but recommended when debugging applications. The toolchain libraries are built with debugging symbols making it possible for GDB to find the source files. The RCC RTEMS sources is assumed to be located in `C:\opt\rtms-4.10-mingw\src\rtms-4.10`. The RTEMS sources (`sparc-rtms-4.10-1.2.x-src.tar.bz2`) can be installed by extracting the source distribution to `C:\opt\rtms-4.10-mingw\src` creating the directory `C:\opt\rtms-4.10-mingw\src\rtms-4.10`.

Alternatively the sources can be obtained from the Git repository, see Section 1.6.

1.2.2.3. Building RTEMS from source

The RTEMS build environment can be set up by following the Windows instructions available www.rtems.org, the environment requires `MSYS-DTK-1.0.1`, `autoconf-2.68` and `automake-1.11.1`. This section describes how to install `MSYS-DTK`, `autoconf`, `automake` and building RTEMS SPARC BSPS from source.

`MSYS-DTK` can be downloaded from www.mingw.org, it comes as a self extracting installation application (`msysDTK-1.0.1.exe`). The following text assumes that `MSYS-DTK` has been installed successfully into the `MSYS` environment.

`Autoconf` and `automake` can be downloaded from <ftp://ftp.gnu.org/gnu/autoconf> and <ftp://ftp.gnu.org/gnu/automake>. Below is an example of how to build and install the required tools.

```
$ mkdir /src
$ cd /src
< ... download autoconf and automake to /src ... >
$ tar -jxf autoconf-2.68.tar.bz2
$ mkdir autoconf-2.68/build
$ cd autoconf-2.68/build
$ ./configure --prefix=/usr
$ make
$ make install
< ...autoconf-2.68 has been installed ... >
$ cd /src
$ tar -jxf automake-1.11.1.tar.bz2
$ mkdir automake-1.11.1/build
$ cd automake-1.11.1/build
$ ./configure --prefix=/usr
$ make
$ make install
< ... automake-1.11.1 has been installed ... >
$ exit
```

After installing `automake` and `autoconf` it may be required to restart the `MSYS` shell.

Once the tools required by RTEMS source tree has been installed and the `MSYS` shell has been restarted the installed RTEMS sources can be built manually or using the prepared Makefile available at `C:\opt\rtms-4.10-mingw\src\Makefile`. The build process is divided in four steps, in the first step the make scripts are generated this step is called bootstrap. The bootstrapping can be done with the make target `boot` as the examples shows below. The bootstrap step is only needed to be rerun when adding or removing files from the source tree.

```
$ cd /opt/rtms-4.10-mingw/src
```

```
$ make bootstrap
```

The second step configures a build environment in `/opt/rtems-4.10-mingw/src/build`,

```
$ make configure
```

The third and fourth steps compile and install the new kernel to `/opt/rtems-4.10-mingw/sparc-rtems`

```
$ make compile
$ make install
```

1.2.3. Installing on Linux platform

The RCC directory tree is compiled to reside in the `/opt/rtems-4.10` directory on all platforms. After obtaining the bziped tarfile with the binary distribution, uncompress and untar it in a suitable location - if this is not `/opt/rtems-4.10` then a link have to be created to point to the location of the RCC directory. The distribution can be installed with the following commands:

```
$ cd /opt
$ bunzip2 -c sparc-rtems-4.10-gcc-4.4.x-1.2.x-linux.tar.bz2 | tar xf -
```

After the compiler is installed, add `/opt/rtems-4.10/bin` to the executables search path and `/opt/rtems-4.10/man` to the man path.

1.2.3.1. Installing RTEMS source

The RTEMS sources used to compile the SPARC BSPS included in RCC is prepared to be installed into `/opt/rtems-4.10/src`, it can be done as follows.

```
$ cd /opt/rtems-4.10/src
$ tar -jxf /path/to/sparc-rtems-4.10-1.2.x.tar.bz2
```

1.2.3.2. Building RTEMS from sources

The RTEMS libraries found in `/opt/rtems-4.10/sparc-rtems/BSP` can be built from the sources using the Makefile found in `/opt/rtems-4.10/src`. The RTEMS build environment assumes that `autoconf-2.68` and `automake-1.11.1` are installed. Documentation on how to install `autoconf` and `automake` is included in respective source and an example can be found above in Section 1.2.2.3.

Alternatively the sources can be obtained from the Git repository, see Section 1.6.

1.3. Contents of `/opt/rtems-4.10`

The created `rtems` directory has the following sub-directories:

| | |
|--------------------------|---|
| <code>bin</code> | Executables |
| <code>doc</code> | RCC and GNU documentation |
| <code>include</code> | Host includes |
| <code>lib</code> | Host libraries |
| <code>make</code> | RTEMS make scripts |
| <code>man</code> | Man pages for GNU tools |
| <code>sparc-rtems</code> | Sparc target libraries |
| <code>src</code> | Various sources, examples and make scripts used to build kernel from source |

1.4. RCC tools

The following tools are included in RCC:

| | |
|------------------------------------|--------------------------------------|
| <code>sparc-rtems-addr2line</code> | Convert address to C/C++ line number |
| <code>sparc-rtems-ar</code> | Library archiver |
| <code>sparc-rtems-as</code> | Cross-assembler |

| | |
|---------------------|--|
| sparc-rtems-c++ | C++ cross-compiler |
| sparc-rtems-c++filt | Utility to demangle C++ symbols |
| sparc-rtems-cpp | The C preprocessor |
| sparc-rtems-g++ | Same as sparc-rtems-c++ |
| sparc-rtems-gcc | C/C++ cross-compiler |
| sparc-rtems-gcov | Coverage testing tool |
| sparc-rtems-gdb | GNU GDB C/C++ level Debugger |
| sparc-rtems-gprof | Profiling utility |
| sparc-rtems-ld | GNU linker |
| sparc-rtems-nm | Utility to print symbol table |
| sparc-rtems-objcopy | Utility to convert between binary formats |
| sparc-rtems-objdump | Utility to dump various parts of executables |
| sparc-rtems-ranlib | Library sorter |
| sparc-rtems-readelf | ELF file information utility |
| sparc-rtems-size | Utility to display segment sizes |
| sparc-rtems-strings | Utility to dump strings from executables |
| sparc-rtems-strip | Utility to remove symbol table |

1.5. Documentation

The RCC and GNU documentation are distributed together with the toolchain, it consists of RTEMS manuals and GNU tools manuals located in the `doc/` directory of the toolchain. The GRLIB drivers that Aeroflex Gaisler develops outside the official repository are documented in a separate drivers document found under `/opt/rtems-4.10/doc`.

GNU manuals:

| | |
|---------------------------|---|
| <code>as.pdf</code> | Using <code>as</code> - the GNU assembler |
| <code>binutils.pdf</code> | The GNU binary utilities |
| <code>cpp.pdf</code> | The C Preprocessor |
| <code>gcc.pdf</code> | Using and porting GCC |
| <code>gdb.pdf</code> | Debugging with GDB |
| <code>gprof.pdf</code> | the GNU profiling utility |
| <code>ld.pdf</code> | The GNU linker |

Newlib C library:

| | |
|-----------------------|---------------------|
| <code>libc.pdf</code> | Newlib C Library |
| <code>libm.pdf</code> | Newlib Math Library |

RTEMS manuals:

| | |
|---------------------------------|--|
| <code>bsp_howto.pdf</code> | BSP and Device Driver Development Guide |
| <code>c_user.pdf</code> | RTEMS C User's Guide (this is the one you want!) |
| <code>cpu_supplement.pdf</code> | RTEMS SPARC CPU Application Supplement |
| <code>develenv.pdf</code> | RTEMS Development environment guide |
| <code>filesystem.pdf</code> | RTEMS Filesystem Design Guide |
| <code>itron.pdf</code> | RTEMS ITRON 3.0 User's Guide |
| <code>networking.pdf</code> | RTEMS Network Supplement |
| <code>new_chapters.pdf</code> | RTEMS Newly added features |

| | |
|-----------------|--|
| porting.pdf | RTEMS Porting Guide |
| posix1003-1.pdf | RTEMS POSIX 1003.1 Compliance Guide |
| posix_users.pdf | RTEMS POSIX API User's Guide |
| relnotes.pdf | RTEMS Release Notes |
| started.pdf | Getting Started with RTEMS for C/C++ Users |

The documents are all provided in PDF format, with searchable indexes.

1.6. RCC source Git access

The RCC RTEMS kernel sources is distributed from Aeroflex Gaisler homepage in a tar-file, the latest patches are also available using Git revision control system. It is possible to browse the code at <http://git.rtems.org/danielh/rcc.git> or checkout the repository issuing the below commands. The RCC sources are found in the rcc-1.2 branch.

```
$ git clone git://git.rtems.org/danielh/rcc.git
```

1.7. Support

The RCC compiler system is provided freely without any warranties. Technical support can be obtained from Aeroflex Gaisler through the purchase of a technical support contract. See www.gaisler.com for more details.

2. Using RCC

2.1. General development flow

Compilation and debugging of applications is typically done in the following steps:

1. Compile and link program with `gcc`
2. Debug program using a simulator (gdb connected to TSIM/GRSIM)
3. Debug program on remote target (gdb connected to GRMON)
4. Create boot-prom for a standalone application with `mkprom2`

RCC supports multi-tasking real-time C/C++ programs based on the RTEMS kernel. Compiling and linking is done in much the same manner as with a host-based `gcc`.

2.2. sparc-rtems-gcc options

The `gcc` compiler has been modified to support the following additional options:

| | |
|-------------------------|---|
| <code>-qleon2</code> | generate LEON2 executable (without driver manager startup initialization). |
| <code>-tsc691</code> | generate ERC32 executable. |
| <code>-qleon3</code> | generate LEON3/4 executable (default if no other option given). |
| <code>-qleon3std</code> | generate LEON3/4 executable without driver manager startup initialization. |
| <code>-qleon3mp</code> | generate LEON3/4 Multiprocessor executable (AMP). |
| <code>-qngmp</code> | use NGMP linker script instead of default. Can be used in conjunction with <code>-qleon3</code> , <code>-qleon3str</code> and <code>-qleon3mp</code> . The RAM address is set to 0 instead of 0x40000000. |

Other usefull (standard) options are:

| | |
|---------------------------|---|
| <code>-g</code> | generate debugging information - must be used for debugging with <code>gdb</code> . |
| <code>-msoft-float</code> | emulate floating-point - must be used if no FPU exists in the system. |
| <code>-mcpu=v8</code> | generate SPARC V8 mul/div instructions- only for LEON with hardware multiply and divide configured. |
| <code>-mtune=ut699</code> | sets UT699 specific parameters. |
| <code>-O2</code> | optimize code - should be used for optimum performance and minimal code size. |

Other GNU GCC options are explained in the `gcc` manual (`gcc.pdf`), see Section 1.5.

2.3. RTEMS applications

To compile and link an RTEMS application, use `sparc-rtems-gcc`:

```
$ sparc-rtems-gcc -g -O2 rtems-hello.c -o rtems-hello
```

RCC creates executables for LEON3/4 by default. To generate executables for LEON2 or ERC32 add `-qleon2` or `-tsc691` switches during both compile and link stages. The default load address is start of RAM, i.e. 0x40000000 for LEON2/3/4 and 0x2000000 for ERC32. Other load addresses can be specified through the use of the `-Ttext` option (see `gcc` manual). See `-qngmp` option above for systems with RAM at address 0.

RCC uses the sources of RTEMS-4.10.2 with minor patches, and allows recompilation if a modification has been made to a bsp or the kernel. Install the RTEMS sources in `/opt/rtems-4.10/src`, and re-compile and install with:

```
$ cd /opt/rtems-4.10/src
$ make install
```

2.4. Floating-point considerations

If the targeted processor has no floating-point hardware, then all applications must be compiled (and linked) with the `-msoft-float` option to enable floating-point emulation. When running the program on the TSIM simulator, the simulator should be started with the `-nfp` option (no floating-point) to disable the FPU.

2.5. LEON SPARC V8 instructions

LEON2, LEON3 and LEON4 processors can be configured to implement the SPARC V8 multiply and divide instructions. The RCC compiler does by default NOT issue those instructions, but emulates them through a library. To enable generation of `mul/div` instruction, use the `-mcpu=v8` switch during both compilation and linking. The `-mcpu=v8` switch improves performance on compute-intensive applications and floating-point emulation.

LEON2/3/4 also supports multiply and accumulate (MAC). The compiler will never issue those instructions, they have to be coded in assembly. Note that the RCC assembler and other utilities are based on a modified version of GNU `binutils-2.20.1` that supports the LEON MAC instructions.

2.6. Memory organisation

The resulting RTEMS executables are in elf format and has three main segments; text, data and bss. The text segment is by default at address `0x40000000` for LEON2/3/4 and `0x20000000` for ERC32, followed immediately by the data and bss segments. The LEON4 NGMP designs has RAM at `0x00000000`, the `-qngmp` compiler switch selects correct linker script for NGMP systems. The stack starts at top-of-ram and extends downwards.

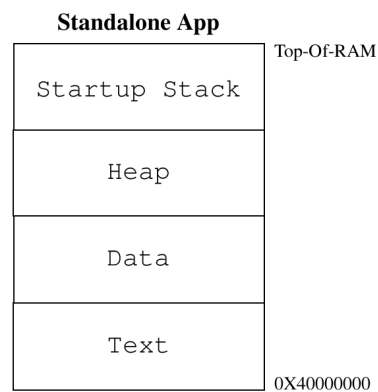


Figure 2.1. RCC RAM applications memory map

The SPARC trap table always occupies the first 4 Kbytes of the `.text` segment.

The LEON BSPs auto-detects end-of-ram by looking at the stack pointer provided by the bootloader or GRMON at early boot. Hence the heap will be sized by the loader.

2.7. Board-support packages (BSPs)

RCC includes board-support packages for LEON2, LEON3 and ERC32. LEON4 is supported by the LEON3 BSP. BSPs provide interface between RTEMS and target hardware through initialization code specific to target processor and a number of device drivers. Console and timer drivers are supported for all processors.

LEON2 and ERC32 BSPs assume a default system resource configuration such as memory mapping of on-chip devices and usage of interrupt resources. LEON3/4 systems are based on GRLIB Plug & Play configuration, and are thereby highly configurable regarding memory mapping and interrupt routing. At start-up, the LEON3 BSP scans the system bus to obtain system configuration information. Device drivers support a number of devices which are automatically recognized, initiated and handled by the device drivers.

2.7.1. LEON3 BSP

The LEON3 BSP includes two different console and timer drivers, standard (official RTEMS) drivers (-qleon3std) and drivers which rely on the driver manager. The latter drivers are possible to configure from the project configuration using standard driver manager configuration options, for example which APBUART device is mapped to `/dev/console` and which timer is used as system clock one needs to configure for AMP systems.

The console drivers supports APBUARTs. The first UART is registered under name `/dev/console`, second and third UARTs get names `/dev/console_b` and `dev/console_c` and so on. LEON3 BSP requires at least one APBUART.

The timer driver uses General Purpose Timer (GPT). The driver handles GPT timer 0 and the lowest interrupt request line used by GPT. GPT timer 0 and lowest request line should never be used by an RTEMS application. If an application needs to use more timers GPT should be configured to have two or more timers using separate request lines. Timer 0 interrupt can not be shared with other devices or GPT timers 1-6.

For more information on how to configure a system based on GRLIB see GRLIB IP Library User's Manual.

2.7.2. NGMP BSP

NGMP systems are supported by the LEON3 BSP and a custom linker script. The NGMP linker script is selected using the `-qngmp` flag to the `gcc` during compiling and linking.

2.8. Driver Manager

The LEON3 BSP uses an optional Driver Manager that handles drivers and devices on the AMBA and PCI Plug & Play buses. The drivers are automatically assigned with one or more hardware devices. The Driver Manager is either initialized by the user from the `Init()` thread after RTEMS as started up, or during startup of RTEMS. The LEON3 BSP has by default (-qleon3 and -qleon3mp) the driver manager enabled (`--drvmgr` was given to configure during compiletime) that means that no extra initialization calls from `Init()` is needed, however which drivers to be included must be configured uniquely per project. One can use `-qleon3std` to avoid using the driver manager. In most cases the GPTIMER and the APBUART drivers are required to boot.

If the driver manager was configured to be initialized by the BSP, the `RTEMS_DRVMGR_STARTUP` define is defined. If not configured the define is not set and the user can choose to initialize the driver manager manually from for example the `Init()` task or not use it at all.

LEON2 systems are divided into two different systems, standard LEON2 systems and GRLIB-LEON2 systems where the AMBA Plug & Play bus is available. Both systems can use the LEON2 hardcoded bus with the Driver Manager, however it's primary intention is to provide a root bus for a second bus supporting Plug & Play. For example a GRLIB-LEON2 system has hardcoded peripherals (the standard LEON2 peripherals) and GRLIB cores attached available from the AMBA Plug & Play information, the setup for a system like that would be a LEON2 hardcoded bus and a LEON2 AMBA Plug & Play sub bus. Once the AMBA Plug & Play bus is initialized all device and their drivers can be used the same way as in LEON3/4 systems.

For AT697 PCI systems the driver manager can be used to scan the PCI bus.

The ERC32 BSP does not support the driver manager.

2.8.1. Initialization

Regardless when the manager is initialized the following steps must be taken, however RTEMS and the BSP takes all steps during startup for us when `--drvmgr` was passed to configure.

Before the driver manager is initialized one must register a root bus driver so that the driver manager knows which bus to start search for devices at. The driver manager itself must also be initialized by calling `drvmgr_init()` before any driver supporting the driver manager can be accessed. The manager replaces the `DRIVER_register()` calls used in previous releases of RTEMS to register drivers.

2.8.2. Configuration

The driver manager is configured by defining the array `drvmgr_drivers`, it contains one function pointer per driver that is responsible to register one or more drivers. The `drvmgr_drivers` can be set up by defining `CONFIGURE_INIT`, selecting the appropriate drivers and including `drvmgr/drvmgr_confdefs.h`. The approach is similar to configuring a standard RTEMS project using `rtems/confdefs.h`. Below is an example how to select drivers.

```
#include <rtems.h>
#define CONFIGURE_INIT
#include <bsp.h>

/* Standard RTEMS setup */
#define CONFIGURE_APPLICATION_NEEDS_CONSOLE_DRIVER
#define CONFIGURE_APPLICATION_NEEDS_CLOCK_DRIVER
#define CONFIGURE_RTEMS_INIT_TASKS_TABLE
#define CONFIGURE_MAXIMUM_DRIVERS
#include <rtems/confdefs.h> 32

/* Driver manager setup */
#if defined(RTEMS_DRVMGR_STARTUP)
/* if --drvmgr was given to configure (-qleon3, -qleon3mp) include GPTIMER and APBUART drivers
 * that rely on the driver manager
 */
#define CONFIGURE_DRIVER_AMBAPP_GAISLER_GPTIMER
#define CONFIGURE_DRIVER_AMBAPP_GAISLER_APBUART
#endif

#define CONFIGURE_DRIVER_AMBAPP_GAISLER_GRETH
#define CONFIGURE_DRIVER_AMBAPP_GAISLER_GRSPW
#define CONFIGURE_DRIVER_AMBAPP_GAISLER_GRCAN
#define CONFIGURE_DRIVER_AMBAPP_GAISLER_OCCAN
#define CONFIGURE_DRIVER_AMBAPP_MCTRL
#define CONFIGURE_DRIVER_AMBAPP_GAISLER_PCIF
#define CONFIGURE_DRIVER_AMBAPP_GAISLER_GRPFI
#define CONFIGURE_DRIVER_PCI_GR_RASTA_IO
#define CONFIGURE_DRIVER_PCI_GR_RASTA_TMTC
#define CONFIGURE_DRIVER_PCI_GR_701

#include <drvmgr/drvmgr_confdefs.h>
```

The timer and console driver must be included when the driver manager is initialized on startup, whereas the standard drivers are included automatically by the standard (`-qleon3std`) BSP setup.

2.8.3. Driver configuration

In the past the driver resources were often a string interpreted by the driver passed into the `DRIVER_register()` function. Since the register functions have been replaced the driver resource format has also been changed, it is now described by an array of different data types which are assigned names for flexibility. The name is searched for by the driver once started, if found the value replaces the default value internal to the driver. The driver uses a driver resource API to easily extract the information. The resources are provided by the bus driver, it is up to the bus driver how the resources are assigned to the bus, the LEON bus drivers use a default weak array that can be overridden by the project configuration. The driver parameters are documented separately for each driver in the driver manual. The example below sets up `GRSPW0` and `GRSPW1` descriptor count driver resources for the AMBA Plug & Play bus on two different GR-RASTA-IO PCI boards and the root bus.

```
/* ROOT AMBA PnP Bus: GRSPW0 and GRSPW1 resources */
struct drvmgr_key grlib_grspw01_res[] =
{
    {"txDesc", KEY_TYPE_INT, {(unsigned int)32}},
    {"rxDesc", KEY_TYPE_INT, {(unsigned int)32}},
    KEY_EMPTY
};

/* If RTEMS_DRVMGR_STARTUP is defined we override the "weak defaults" that
 * is defined by the LEON3 BSP.
 */
struct drvmgr_bus_res grlib_drv_resources =
{
    .next = NULL,
    .resource = {
        {DRIVER_AMBAPP_GAISLER_GRSPW_ID, 0, &grlib_grspw01_res[0]},
        {DRIVER_AMBAPP_GAISLER_GRSPW_ID, 1, &grlib_grspw01_res[0]},
        RES_EMPTY
    }
};
```

```

    },
};

#ifndef RTEMS_DRVMGR_STARTUP
struct grlib_config grlib_bus_config = {
    &ambapp_plb, /* AMBAPP bus setup */
    &grlib_drv_resources, /* Driver configuration */
};
#endif

/* GR-RASTA-IO 0: GRSPW0 resources */
struct drvmgr_key rastaio0_grspw0_res[] = {
    {"txDesc", KEY_TYPE_INT, {(unsigned int)8}},
    {"rxDesc", KEY_TYPE_INT, {(unsigned int)32}},
    KEY_EMPTY
};

/* GR-RASTA-IO 1: GRSPW1 resources */
struct drvmgr_key rastaio0_grspw1_res[] = {
    {"txDesc", KEY_TYPE_INT, {(unsigned int)16}},
    {"rxDesc", KEY_TYPE_INT, {(unsigned int)16}},
    KEY_EMPTY
};

/* GR-RASTA-IO 1: GRSPW0 and GRSPW1 resources use same configuration */
struct drvmgr_key rastaio1_grspw01_res[] = {
    {"txDesc", KEY_TYPE_INT, {(unsigned int)16}},
    {"rxDesc", KEY_TYPE_INT, {(unsigned int)64}},
    KEY_EMPTY
};

/** Driver resources for GR-RASTA-IO 0 AMBA PnP bus */
struct drvmgr_bus_res gr_rasta_io0_res = {
    .next = NULL,
    .resource = {
        {DRIVER_AMBAPP_GAISLER_GRSPW_ID, 0, &rastaio0_grspw0_res[0]},
        {DRIVER_AMBAPP_GAISLER_GRSPW_ID, 1, &rastaio0_grspw1_res[0]},
        RES_EMPTY
    },
};

/** Driver resources for GR-RASTA-IO 1 AMBA PnP bus */
struct drvmgr_bus_res gr_rasta_io1_res = {
    .next = NULL,
    .resource = {
        {DRIVER_AMBAPP_GAISLER_GRSPW_ID, 0, &rastaio1_grspw01_res[0]},
        {DRIVER_AMBAPP_GAISLER_GRSPW_ID, 1, &rastaio1_grspw01_res[0]},
        RES_EMPTY
    },
};

/* Tell GR-RASTA-IO driver about the bus resources.
 * Resources for one GR-RASTA-IO board are available.
 * AMBAPP->PCI->GR-RASTA-IO->AMBAPP bus resources
 *
 * The resources will be used by the drivers for the
 * cores found on the GR-RASTA-IO->AMBAPP bus.
 *
 * The "weak defaults" are overridden here.
 */
struct drvmgr_bus_res *gr_rasta_io_resources[] = {
    &gr_rasta_io0_res, /* GR-RASTA-IO board 1 resources */
    &gr_rasta_io1_res, /* GR-RASTA-IO board 2 resources */
    NULL, /* End of table */
};

rtems_task Init( rtems_task_argument argument)
{
    /* Manual driver manager initialization only required when driver manager not initialized during
     * startup (-qleon2, -qleon3std)
     */
    #ifndef RTEMS_DRVMGR_STARTUP
        /* Register GRLIB root bus (LEON3/4) */
        ambapp_grlib_root_register(&grlib_bus_config);

        /* Initialize Driver Manager */
        drvmgr_init();
    #endif
    ...
}

```

2.8.4. drvmgr command

The RTEMS shell comes with a number of commands, the `drvmgr` command can be used to extract information about the current setup and hardware. Please see the `rtems-shell.c` sample application that comes with RCC. The `rtems-shell` on a GR712RC ASIC:

```

Creating /etc/passwd and group with three useable accounts
root/pwd , test/pwd, rtems/NO PASSWORD

RTEMS SHELL (Ver.1.0-FRC):dev/console. Oct 3 2011. 'help' to list commands.
[/] # drvmgr --help
usage:
drvmgr buses      List bus specific information on all buses
drvmgr devs       List general and driver specific information
                  about all devices
drvmgr drvs       List driver specific information on all drivers
drvmgr info [ID]  List general and driver specific information
                  about all devices or one device, bus or driver
drvmgr mem        Dynamically memory usage
drvmgr parent ID  Short info about parent bus of a device
drvmgr remove ID  Remove a device or a bus
drvmgr res ID     List Resources of a device or bus
drvmgr short [ID] Short info about all devices/buses or one
                  device/bus
drvmgr topo       Show bus topology with all devices
drvmgr tr ID OPT ADR Translate hw(0)/cpu(1) (OPT bit0) address ADR
                  down(0)/up(1) streams (OPT bit1) for device

drvmgr --help

[/] # drvmgr topo
--- BUS TOPOLOGY ---
|-> DEV 0x400fd3a0 GRLIB AMBA PnP
  |-> DEV 0x400fd450 GAISSLER_LEON3FT
  |-> DEV 0x400fd4a8 GAISSLER_LEON3FT
  |-> DEV 0x400fd500 GAISSLER_AHBJTAG
  |-> DEV 0x400fd558 GAISSLER_ETHMAC
  |-> DEV 0x400fd5b0 GAISSLER_SATCAN
  |-> DEV 0x400fd608 GAISSLER_SPW2
  |-> DEV 0x400fd660 GAISSLER_SPW2
  |-> DEV 0x400fd6b8 GAISSLER_SPW2
  |-> DEV 0x400fd710 GAISSLER_SPW2
  |-> DEV 0x400fd768 GAISSLER_SPW2
  |-> DEV 0x400fd7c0 GAISSLER_SPW2
  |-> DEV 0x400fd818 GAISSLER_B1553BRM
  |-> DEV 0x400fd870 GAISSLER_GRTC
  |-> DEV 0x400fd8c8 GAISSLER_GRTM
  |-> DEV 0x400fd920 GAISSLER_SLINK
  |-> DEV 0x400fd978 GAISSLER_FTMCTRL
  |-> DEV 0x400fd9d0 GAISSLER_APBMS
  |-> DEV 0x400fd928 GAISSLER_LEON3DSU
  |-> DEV 0x400fd980 GAISSLER_APBMS
  |-> DEV 0x400fdb30 GAISSLER_CANAHB
  |-> DEV 0x400fdad8 GAISSLER_CANAHB
  |-> DEV 0x400fdb88 GAISSLER_FTAHBRAM
  |-> DEV 0x400fdba0 GAISSLER_APBUART
  |-> DEV 0x400fdc38 GAISSLER_IRQMP
  |-> DEV 0x400fdc90 GAISSLER_GPTIMER
  |-> DEV 0x400fdce8 GAISSLER_SPICTRL
  |-> DEV 0x400fd40 GAISSLER_CANMUX
  |-> DEV 0x400fdd98 NO_NAME
  |-> DEV 0x400fddf0 GAISSLER_ASCS
  |-> DEV 0x400fde48 GAISSLER_GPIO
  |-> DEV 0x400fdea0 GAISSLER_GPIO
  |-> DEV 0x400def8 GAISSLER_I2CMST
  |-> DEV 0x400df50 GAISSLER_CLKGATE
  |-> DEV 0x400dfa8 GAISSLER_AHBSTAT
  |-> DEV 0x400fe000 GAISSLER_APBUART
  |-> DEV 0x400fe058 GAISSLER_APBUART
  |-> DEV 0x400fe0b0 GAISSLER_APBUART
  |-> DEV 0x400fe108 GAISSLER_APBUART
  |-> DEV 0x400fe160 GAISSLER_APBUART
  |-> DEV 0x400fe1b8 GAISSLER_GRTIMER

[/] # drvmgr info 0x400fdbe0
-- DEVICE 0x400fdbe0 --
PARENT BUS: 0x400fd408
NAME:      GAISSLER_APBUART
STATE:     0x00000100
INIT LEVEL: 4
ERROR:     0
MINOR BUS: 0

```

```

MINOR DRV: 0
DRIVER: 0x400a2198 (APBUART_DRV)
PRIVATE: 0x400fe210
--- DEVICE INFO FROM BUS DRIVER ---
AMBA PnP DEVICE
VENDOR ID: 0x0001 (VENDOR_GAISLER)
DEVICE ID: 0x000c (GAISLER_APBUART)
IRQ: 2
VERSION: 0x1
ambapp_core: 0x400fdc1c
interfaces: APBSLV
APBSLV_FREQ: 80000kHz
    apb: 0x80000100-0x800001ff
--- DEVICE INFO FROM DEVICE DRIVER ---
UART Mode: TERMIO_POLLLED
STATUS REG: 0x100082
CTRL REG: 0x80000803
SCALER REG: 0x103 baud rate 38610

```

2.9. Network configuration

The LEON2/3 BSPs support two network devices: the Aeroflex Gaisler GRETH MAC and the LAN91C111. The GRETH driver comes in two editions, one that needs the driver manager (in libbsp) to operate and the standard driver (in libchip). The driver manager dependent GRETH driver adds the network interface automatically to the `rtems_bsdnet_config` network interface configuration using `network_interface_add()` function. The LAN91C111 chip cannot be found by Plug & Play so it has to be manually set up by either hardcoding an entry in the `rtems_bsdnet_config` interface list or dynamically registered by calling `network_interface_add()`. The LAN91C111 attach routine is defined by `RTEMS_BSP_NETWORK_DRIVER_ATTACH_SMC91111` in `bsp.h`. The standard GRETH device is setup in a similar way, see `bsp.h`.

See `src/samples/rtems-ttcp.c` for sample a networking application.

2.10. PCI

Aeroflex Gaisler provides a PCI Library together with RTEMS located in `cpukit/libpci` in the sources. The documentation for the PCI Library is located in the RTEMS documentation `doc/usr/libpci.t` and available prebuilt into PDF named `c_user.pdf`, see Section 1.5.

The RTEMS shell has been extended with a `pci` command can be used to extract information about the current setup and hardware. Please see the `[rtems-shell.c]` sample application that comes with RCC. A non-PCI system:

```

reating /etc/passwd and group with three useable accounts
root/pwd , test/pwd, rtems/NO PASSWORD

RTEMS SHELL (Ver.1.0-FRC):dev/console. Oct 3 2011. 'help' to list commands.
[/] # pci --help
usage:
pci ls [bus:dev:fun|PCIID]      List one or all devices
pci r{8|16|32} bus:dev:fun OFS  Configuration space read
pci r{8|16|32} PCIID OFS       Configuration space read
                                access by PCIID
pci w{8|16|32} bus:dev:fun OFS D Configuration space write
pci w{8|16|32} PCIID OFS D     Configuration space write
                                access by PCIID
pci pciid bus:dev:fun          Print PCIID for bus:dev:fun
pci pciid PCIID               Print bus:dev:fun for PCIID
pci pcfg                      Print current PCI config for
                                static configuration library
pci getdev {PCIID|bus:dev:fun} Get PCI Device from RAM tree
pci infodev DEV_ADR           Info about a PCI RAM Device
pci --help

[/] # pci
SYSTEM: UNKNOWN / UNINITIALIZED
CFG LIBRARY: AUTO
NO. PCI BUSES: 0 buses
PCI ENDIAN: Little
MACHINE ENDIAN: Big

```


2.11. Making boot-proms

RTEMS applications are linked to run from beginning of RAM. To make a boot-PROM that will run from the PROM on a standalone target, use the `mkprom2` utility freely available from www.gaisler.com. The `mkprom` utility is documented in a separate document that is distributed together with the `mkprom2` utility. `Mkprom` will create a compressed boot image that will load the application into RAM, initiate various processor registers, and finally start the application. `Mkprom` will set all target dependent parameters, such as memory sizes, wait-states, baudrate, and system clock. The applications do not set these parameters themselves, and thus do not need to be re-linked for different board architectures.

The example below creates a LEON3 boot-prom for a system with 1 Mbyte RAM, one waitstate during write, 3 waitstates for rom access, and 40 MHz system clock. For more details see the `mkprom` manual

```
$ mkprom2 -ramsz 1024 -ramwvs 1 -romws 3 hello.exe -freq 40 hello.exe
```

Note that `mkprom` creates binaries for LEON2/3 and for ERC32, select processor type with the `mkprom` options `-leon3`, `-leon2` or `-erc32` flag. To create an SRECORD file for a prom programmer, use `objcopy`:

```
$ sparc-rtems-objcopy -O srec rtems-hello rtems-hello.srec
```

2.12. Simple examples

Following example compiles the famous "hello world" program and creates a boot-prom in SRECORD format:

```
bash-2.04$ sparc-rtems-gcc -mcpu=v8 -msoft-float -O2 rtems-hello.c -o rtems-hello
bash-2.04$ mkprom2 -leon3 -freq 40 -dump -baud 38400 -ramsize 1024 -rmw rtems-hello
bash-2.04$ sparc-rtems-objcopy -O srec rtems-hello rtems-hello.srec
bash-2.04$
```

Several example C programs can be found in `/opt/rtems-4.10/src/samples`.

2.13. Multiprocessing

RTEMS supports asymmetric multiprocessing (AMP), the LEON3 BSP supports AMP in two different setups. Either the RTEMS kernel is compiled with multiprocessing support (`-qleon3mp`) or the user setup custom resource sharing with driver manager resources (`-qleon3`), the difference is that RTEMS provide multiprocessing objects and communication channels in the former case and in the latter case the user is responsible for all synchronization itself which in many cases are sufficient. All nodes in a asymmetric multiprocessor system executes thier own program image. Messages are passed between the nodes containing synchronization information, for example take global semaphore A. Messages are sent over memory using the Shared Memory Support Driver in the LEON3 BSP, and interrupts are used to alert the receiving CPU.

The kernel must be compiled with multiprocessing support in order for the RTEMS AMP support to be available, the toolchain includes a precompiled LEON3 MP kernel in `rtems-4.10/sparc-rtems/leon3mp`, it is the LEON3 BSP compiled with multiprocessing support. The MP kernel is selected when the `[-qleon3mp]` argument is given to `sparc-rtems-gcc`.

Since each CPU executes its own program image, a memory area has to be allocated for each CPU's program image and stack. This is achieved by linking each CPU's RTEMS program at the start addresses of the CPU's memory area and setting stack pointer to the top of the memory area. E.g. for two CPU system, the application running on CPU 0 could run in memory area `0x40100000 - 0x401fffff`, while CPU 1 runs in memory area `0x40200000 - 0x402fffff`. Shared Memory Support Driver allocates 4 KB buffer at address `0x40000000` for message passing (this area can not be used for applications).

Each CPU requires its own set of standard peripherals such as UARTs and timers. In an MP system the BSP will automatically allocate UART 1 and GPT 0 timer 1 to CPU 0, UART 2 and GPT 0 timer 2 to CPU 1 and so on. When the default configuration does not meet the requirements or hardware setup a custom resource allocation can be setup using the driver manager, see below.

The shared memory driver's default memory layout configuration can be overridden without recompiling the kernel. The default settings are set in the variable weak variable `BSP_shm_cfgtbl`, it can be overridden

by defining `BSP_shm_cfgtbl` once in the project as in the below example. The parameters that has an effect in changing is the fields base and length.

```
/* Override default SHM configuration */
shm_config_table BSP_shm_cfgtbl = {
    .base = (void *)0x40000000,
    .length = 0x00010000
};
```

Hardware resource allocation is done by the BSP for UART, IRQ controller and System Clock Timer. Devices which has a driver that is implemented using the driver manager can be ignored by a specific CPU by assigning the keys value NULL in the driver resources. The driver manager simply ignores the device when a NULL resource is detect. An example is given below where CPU0 is assigned GRGPIO0 and CPU1 GRGPIO1. GPTIMER driver have options that limit number of timers and which timer is used for system clock, the system console and debug output can be selected to a specific UART with the APBUART driver.

CPU0 Application:

```
struct rtems_drvmgr_drv_res grlib_drv_resources[] =
{
    {DRIVER_AMBAPP_GAISLER_GRGPIO_ID, 1, NULL} /* Used by CPU1 */
};
```

CPU1 Application:

```
struct rtems_drvmgr_drv_res grlib_drv_resources[] =
{
    {DRIVER_AMBAPP_GAISLER_GRGPIO_ID, 0, NULL}, /* Used by CPU0 */
    {DRIVER_AMBAPP_GAISLER_GRGPIO_ID, 1, &grlib_drv_res_grgpio1[0]}
};
```

Following example shows how to run RTEMS MP application on a two CPU system using GRMON. CPU 0 executes image node1.exe in address space 0x60000000 - 0x600ffff while CPU 1 executes image node2.exe in address space 0x60100000 - 0x601ffff.

GRMON LEON debug monitor v1.1.22

Copyright (C) 2004,2005 Gaisler Research - all rights reserved.
For latest updates, go to <http://www.gaisler.com>
Comments or bug-reports to support@gaisler.com
...

```
grlib> lo node1.exe
section: .text at 0x60000000, size 143616 bytes
section: .data at 0x60023100, size 3200 bytes
total size: 146816 bytes (174.4 kbit/s)
read 852 symbols
entry point: 0x60000000
grlib> lo node2.exe
section: .text at 0x60100000, size 143616 bytes
section: .data at 0x60123100, size 3200 bytes
total size: 146816 bytes (172.7 kbit/s)
read 852 symbols
entry point: 0x60100000
grlib> cpu act 0
active cpu: 0
grlib> ep 0x60000000
entry point: 0x60000000
grlib> stack 0x600fff00
stack pointer: 0x600fff00
grlib> cpu act 1
active cpu: 1
grlib> ep 0x60100000
entry point: 0x60100000
grlib> stack 0x601fff00
stack pointer: 0x601fff00
grlib> cpu act 0
active cpu: 0
grlib> run
```

RTEMS MP applications can not be run directly in GRSIM (using **load** and **run** commands). Instead a boot image containing several RTEMS MP applications should be created and simulated.

2.13.1. MP testsuite

The MP testsuite is located in the sources under `testsuite/mptests`, it requires modifications to the make scripts in order to select a unique image RAM location. The default shared memory area is at

0x40000000-0x40000fff, the two images for node1 and node2 needs to be located on a unique address and the heap/stack must also fit. The argument `-Wl,-Ttext,0x40001000` for node1 and `-Wl,-Ttext,0x40200000` for node2 can be added to the link stage, and the entry point (0x40001000 and 0x40200000) and stacks (0x401fff0 and 0x403fff0) must also be set by the loader (GRMON or mkprom for example). Depending on where the RAM memory is located and how much memory is available the paramters may vary.

3. Execution and debugging

Applications built by RCC can be debugged on the TSIM LEON/ERC32 simulator, or on target hardware using the GRMON debug monitor (LEON only). Both TSIM and GRMON can be connected to the GNU debugger (gdb) for full source-level debugging.

3.1. TSIM

The TSIM simulator can emulate a full ERC32 and LEON2/3 system with on-chip peripherals and external memories. For full details on how to use TSIM, see the TSIM User's Manual. Below is a simple example that shows how the 'hello world' program is run in the simulator:

```
$ tsim-leon3 rtems-hello

TSIM/LEON3 SPARC simulator, version 2.0.4a (professional version)

Copyright (C) 2001, Gaisler Research - all rights reserved.
For latest updates, go to http://www.gaisler.com/
Comments or bug-reports to tsim@gaisler.com

using 64-bit time
serial port A on stdin/stdout
allocated 4096 K RAM memory, in 1 bank(s)
allocated 2048 K ROM memory
icache: 1 * 4 kbytes, 16 bytes/line (4 kbytes total)
dcache: 1 * 4 kbytes, 16 bytes/line (4 kbytes total)
section: .text, addr: 0x40000000, size 92096 bytes
section: .data, addr: 0x400167c0, size 2752 bytes
read 463 symbols
tsim> go
resuming at 0x40000000
Hello World

Program exited normally.
tsim>
```

3.2. GRMON

GRMON is used to download, run and debug LEON2/3 software on target hardware. For full details on how to use GRMON, see the GRMON User' Manual. Below is a simple example that shows how the "hello world" program is downloaded and run:

```
$ grmon -u -jtag

GRMON LEON debug monitor v1.1.11

Copyright (C) 2004,2005 Gaisler Research - all rights reserved.
For latest updates, go to http://www.gaisler.com/
Comments or bug-reports to support@gaisler.com

using JTAG cable on parallel port
JTAG chain: xc3s1500 xcf04s xcf04s

initialising .....
detected frequency: 41 MHz
GRLIB build version: 1347

Component                                Aeroflex Gaisler
LEON3 SPARC V8 Processor                  Aeroflex Gaisler
AHB Debug UART                            Aeroflex Gaisler
AHB Debug JTAG TAP                        Aeroflex Gaisler
GR Ethernet MAC                           Aeroflex Gaisler
LEON2 Memory Controller                   European Space Agency
AHB/APB Bridge                             Aeroflex Gaisler
LEON3 Debug Support Unit                  Aeroflex Gaisler
Nuhorizons Spartan3 I/O interfaced       Aeroflex Gaisler
OC CAN controller                         Aeroflex Gaisler
Generic APB UART                          Aeroflex Gaisler
Multi-processor Interrupt Ctrl            Aeroflex Gaisler
Modular Timer Unit                        Aeroflex Gaisler

Use command 'info sys' to print a detailed report of attached cores

grlib> lo rtems-hello
section: .text at 0x40000000, size 92096 bytes
section: .data at 0x400167c0, size 2752 bytes
```

```
total size: 94848 bytes (339.7 kbit/s)
read 463 symbols
entry point: 0x40000000
gplib> run
Hello World
gplib>
```

Note that the program was started from address 0x40000000, the default start address.

GRMON can also be used to program the boot-PROM image created by sparc-rtems-mkprom into the target's flash PROM.

```
grmon[gplib]> flash unlock all
grmon[gplib]> flash erase all
Erase in progress
Block @ 0x00000000 : code = 0x00800080 OK
Block @ 0x00004000 : code = 0x00800080 OK
...
grmon[gplib]> flash load prom.out
section: .text at 0x0, size 54272 bytes
total size: 54272 bytes (93.2 kbit/s)
read 45 symbols
grmon[gplib]> flash lock all
```

When boot-PROM is run (i.e. after reset) it will initialize various LEON registers, unpack the application to the RAM and start the application. The output on console when running "hello world" from PROM is shown below:

```
MkProm LEON3 boot loader v1.2
Copyright Gaisler Research - all right reserved

system clock   : 40.0 MHz
baud rate      : 38352 baud
prom           : 512 K, (2/2) ws (r/w)
sram           : 1024 K, 1 bank(s), 0/0 ws (r/w)

decompressing .text
decompressing .data

starting rtems-hello

Hello World
```

The application must be re-loaded with the **load** command before it is possible to re-execute it.

When running multiple RTEMS programs on a multiprocessing system, entry point and stack pointer have to be set up individually for each CPU. E.g. when running app1.exe (link address 0x40100000) on CPU0 and app2.exe (link address 0x40200000) on CPU1:

```
gplib> lo app1.exe
gplib> lo app1.exe
gplib> cpu act 0
gplib> ep 0x40100000
gplib> stack 0x401fff00
gplib> cpu act 1
gplib> ep 0x40200000
gplib> stack 0x402fff00
gplib> cpu act 0
gplib> run
```

3.3. GDB with GRMON and TSIM

To perform source-level debugging with gdb, start TSIM or GRMON with -gdb or enter the **gdb** command at the prompt. Then, attach gdb by giving command "tar extended-remote localhost:2222" to gdb when connecting to GRMON or "tar extended-remote localhost:1234" when connecting to TSIM. Note that RTEMS applications do not have a user-defined main() function necessarily as ordinary C-programs. Instead, put a breakpoint on Init(), which is the default user-defined start-up function.

```
jupiter> sparc-rtems-gdb rtems-hello
GNU gdb 6.7.1
Copyright (C) 2007 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <http://gnu.org/licenses/gpl.html>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law. Type "show copying"
and "show warranty" for details.
This GDB was configured as "--host=i686-pc-linux-gnu --target=sparc-rtems".
```

```
(gdb) tar extended-remote localhost:2222
Remote debugging using localhost:2222
(gdb) load
Loading section .text, size 0x164e0 lma 0x40000000
Loading section .jcr, size 0x4 lma 0x400164e0
Loading section .data, size 0xaa8 lma 0x400164e8
Start address 0x40000000, load size 94092
Transfer rate: 57902 bits/sec, 277 bytes/write.
(gdb) break Init
Breakpoint 2 at 0x400011f8: file rtems-hello.c, line 33.
(gdb) run
The program being debugged has been started already.
Start it from the beginning? (y or n) y

Starting program: /opt/rtems-4.10/src/samples/rtems-hello

Breakpoint 2, Init (ignored=0) at rtems-hello.c:33
33     printf("Hello World\n");
(gdb) cont
Continuing.
Hello World
Program exited with code 0363.
```

The application must be re-loaded with the **load** command before it is possible to re-execute it.

3.4. Using DDD graphical front-end to gdb

DDD is a graphical front-end to gdb, and can be used regardless of target. The DDD graphical debugger is freely available from <http://www.gnu.org/software/ddd>. To start DDD with the sparc-rtems-gdb debugger do:

```
ddd --debugger sparc-rtems-gdb
```

The required gdb commands to connect to a target can be entered in the command window. See the GDB and DDD manuals for how to set the default settings. If you have problems with getting DDD to run, run it with `--check-configuration` to probe for necessary libraries etc. DDD has many advanced features, see the on-line manual under the 'Help' menu.

On windows/cygwin hosts, DDD must be started from an xterm shell. First launch the cygwin X-server by issuing 'startx' in a cygwin shell, and then launch DDD in the newly created xterm shell.

4. Support

For Support, contact the Aeroflex Gaisler support team at support@gaisler.com.

5. Disclaimer

Aeroflex Gaisler AB, reserves the right to make changes to any products and services described herein at any time without notice. Consult Aeroflex or an authorized sales representative to verify that the information in this document is current before using this product. Aeroflex does not assume any responsibility or liability arising out of the application or use of any product or service described herein, except as expressly agreed to in writing by Aeroflex; nor does the purchase, lease, or use of a product or service from Aeroflex convey a license under any patent rights, copyrights, trademark rights, or any other of the intellectual rights of Aeroflex or of third parties.